



## CONCEALMENT BARN DOOR/FLAG INSTALLATION

**Read Carefully Before Installation**

The Tactical Walls Barn Door/Flag Concealment products make for a simple, clean home decor accessory with a secret. Barn Doors and Flags are installed without cutting into your wall, making installation and prep a breeze. A professional is recommended but not required for a safe and accurate installation.

### **SAFETY FIRST!**

**AN IMPROPERLY INSTALLED MIRROR MAY CAUSE BODILY HARM, DAMAGE TO USER EQUIPMENT, AND CREATE A HOUSE HAZARD.**

### **GOT TOOLS?**

Studfinder, tape measure, level, pencil/marker, strong tape, and drill/driver.

### **WE RECOMMEND!**

A second pair of hands and eyeballs will significantly ease this installation process.

**FINALLY, READ AND STUDY ALL INSTRUCTION STEPS BEFORE DRILLING OR FASTENING!**

---

Have questions? Contact us via provided support email below or visit our website for installation video tutorials. Of course, don't forget to like and follow Tactical Walls and share your setup with us and the world!


Share your setup with us and the world!




support@tacticalwalls.com

TACTICALWALLS.COM


# INSTALLATION PROCESS FOR BARN DOOR/FLAG

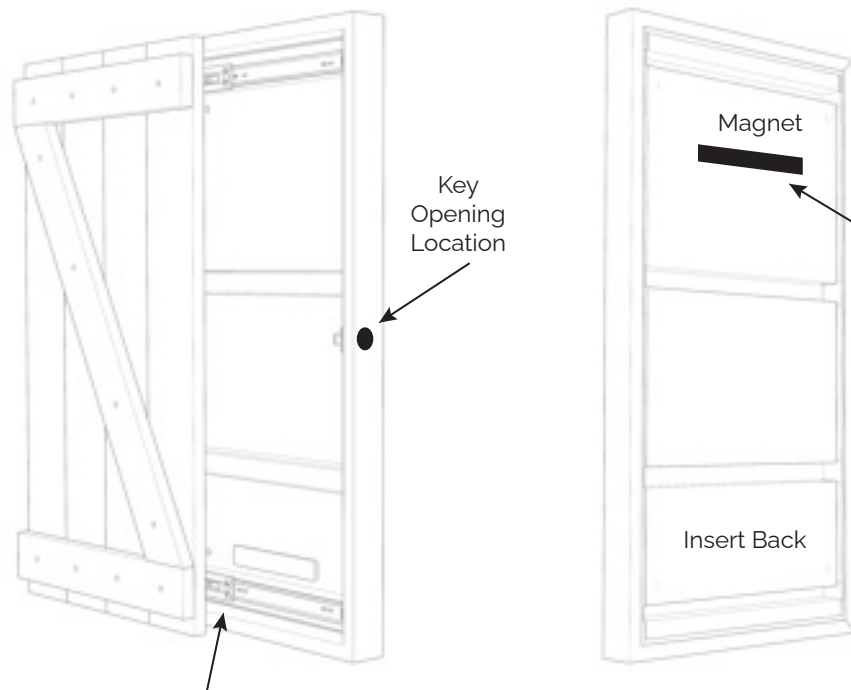

**1** Open sliding door with provided magnet key via opening location. Release the sliding door from frame by depressing plastic tabs. Install door back on after Step 3.

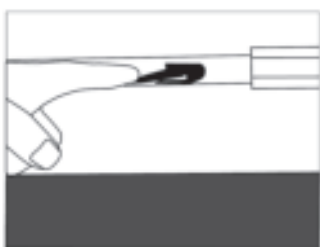

**2** Attach large magnet(s) to desired orientation and location on the back of plastic insert with tape. *Any smaller, screwed-in magnets go on the front of insert and can be installed at any time.*

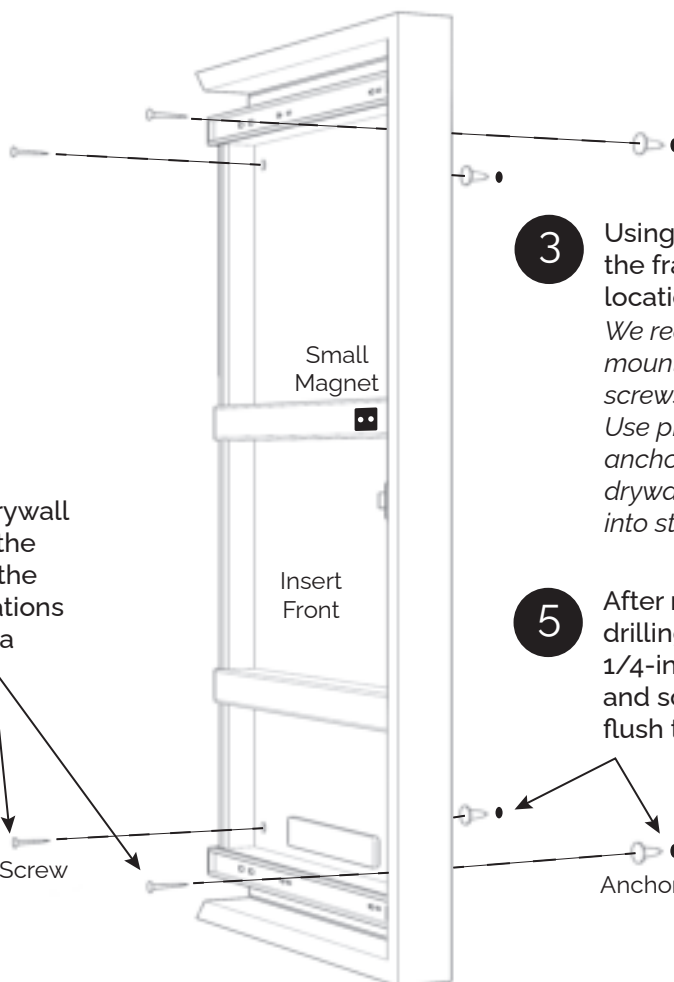

**3** Using a level, orient the frame in preferred location on the wall. *We recommend mounting one pair of screws on a wall stud. Use provided drywall anchors ONLY on drywall; screw directly into stud otherwise.*

**4** Partially drive 4 provided drywall screws into the dimples of the plastic insert. You may use the screws to mark drilling locations on the wall or you may use a marker or pencil to do so.

**5** After marking wall drilling locations, use 1/4-inch bit to predrill and screw in anchors flush to wall.

**6** Align the frame with the holes in the wall and drive 4 dry screws tight through insert dimples and into wall. Attach door onto sliders until plastic tabs lock in with a click.