

MINI CLOCK INSTALLATION

Read Carefully Before Installation

The Tactical Walls Mini Wall Clocks are designed to seemlessly hide firearms, utilities, and anything you can think of out of sight, out of mind. A professional is recommended but not required for a safe and accurate installation.

SAFETY FIRST!

Before installing your Mini Clock on your wall, make sure the clock is installed with proper hardware to safely support your concealed items. AN IMPROPERLY INSTALLED CLOCK MAY CAUSE BODILY HARM AND/OR CAUSE DAMAGE TO USER EQUIPMENT.

GOT TOOLS?

Studfinder, tape measure, level, pencil/marker, drill bits, and drill/driver

WE RECOMMEND!

A second pair of hands and eyeballs will significantly ease this installion process and yield the best possible outcome.

FINALLY, READ AND STUDY ALL INSTRUCTION STEPS BEFORE DRILLING & FASTENING!


Have questions? Contact us via provided support email below or visit our website for installation video tutorials. Of course, don't forget to like and follow Tactical Walls and share your setup with us and the world!


Share your setup with us and the world!





support@tacticalwalls.com
TACTICALWALLS.COM

Installation Process for Mini Clocks

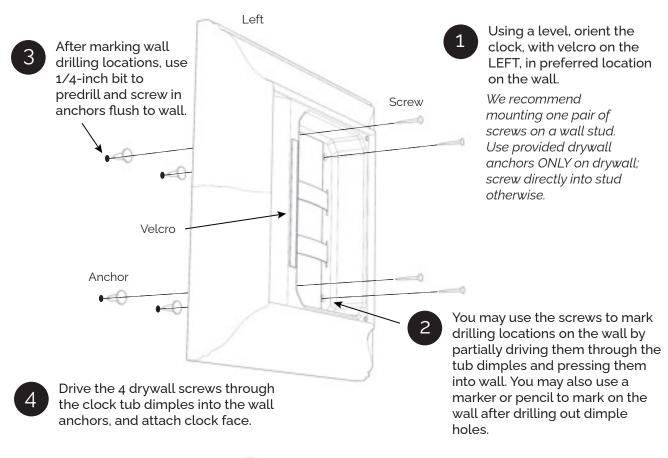

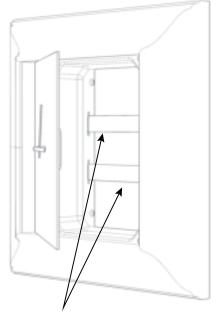



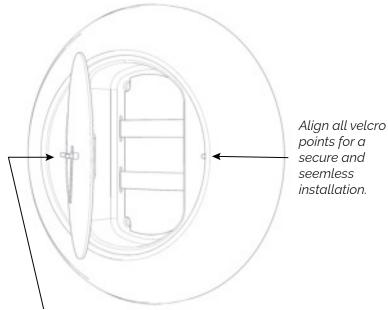

6 Locate the 9 O'clock area on clock face and press down to release from clock frame.