



CONCEALMENT MIRROR INSTALLATION

Read Carefully Before Installation

The Tactical Walls Concealment Mirrors are designed for a standard 2x4 construction framed 16" on center studs. It is crucial that the mirror is fastened to studs to avoid it pulling off the wall. A professional is recommended but not required for a safe and accurate installation.

IS YOUR WALL CLEAR FOR INSTALLATION?

Before installing your concealment mirror on your wall, make sure you know what is behind the wall, that is plumbing, electrics, ducts etc. **AN IMPROPERLY INSTALLED MIRROR MAY CAUSE BODILY HARM, DAMAGE TO USER EQUIPMENT, AND CREATE A HOUSE HAZARD.**

GOT TOOLS?

Studfinder, tape measure, level, pencil/marker, hole saw, jigsaw/sawzall/circular saw, drill/driver, inspection mirror and flashlight/worklight.

WE RECOMMEND!

A second pair of hands and eyeballs will significantly ease this installation process, especially for larger mirrors and heavy safe inserts.

FINALLY, READ AND STUDY ALL INSTRUCTION STEPS BEFORE CUTTING OR FASTENING!

Have questions? Contact us via provided support email below or visit our website for installation video tutorials. Of course, don't forget to like and follow Tactical Walls and share your setup with us and the world!

Share your setup with us and the world!




support@tacticalwalls.com

TACTICALWALLS.COM

INSTALLATION PROCESS FOR SLIDING & HINGED MIRRORS


1

Open mirror door with provided magnetic key.

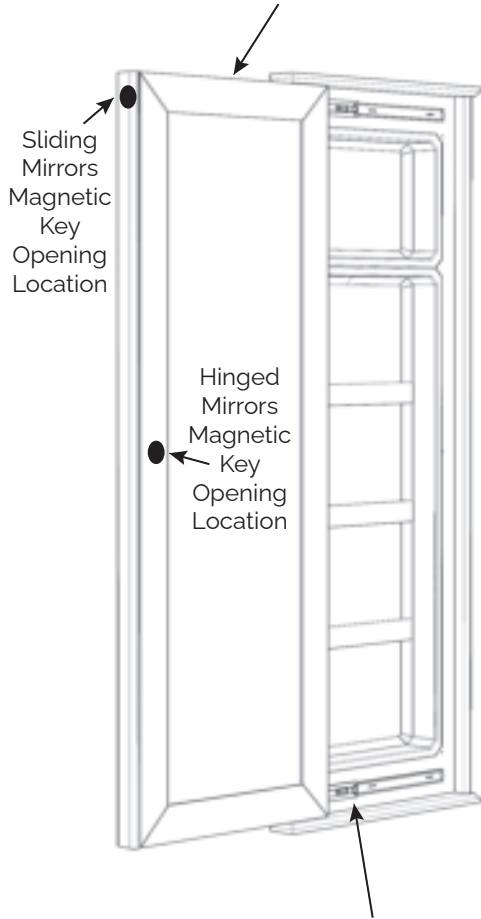


3

Locate & mark wall studs 16" apart & cut a rectangular opening in wall to match dimensions of mirror frame opening. Mock it up & mark opening on wall if needed.

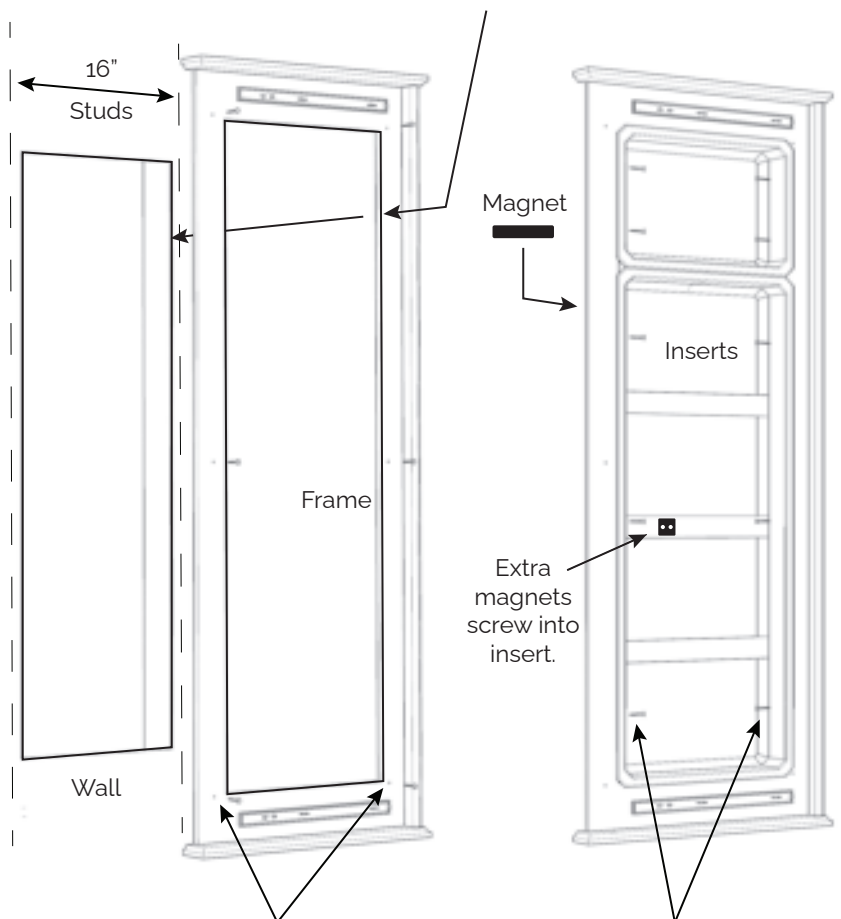

2

FOR SLIDING MIRRORS: Release the sliding door from frame by depressing plastic tab. Install door back on after Step 5.

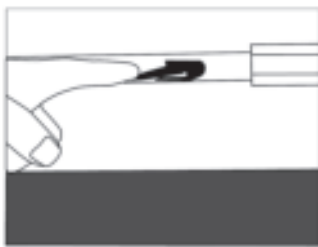

4

Using a level, align the mirror frame with the cut out opening & drive the 6 provided fasteners into the studs in the wall.

5

Tape magnets to back of inserts in preferred locations. Install inserts & fasten with provided hardware into the side of wall studs.

FOR SAFES: Open safe with provided key. Fasten safe to inside of wall studs with provided hardware from the inside of the safe.

