
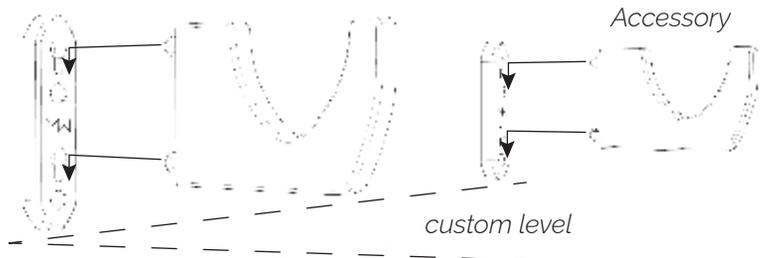



## MODWALL NANO MOUNT INSTALLATION

Locate wall stud with a studfinder/magnet for your desired mount location and fasten Nano Mount flush to wall with provided drywall screws.


Adjust accessory height to the object being mounted for a level appearance by attaching accessories to Nano Mounts and marking desired orientation/position on wall.

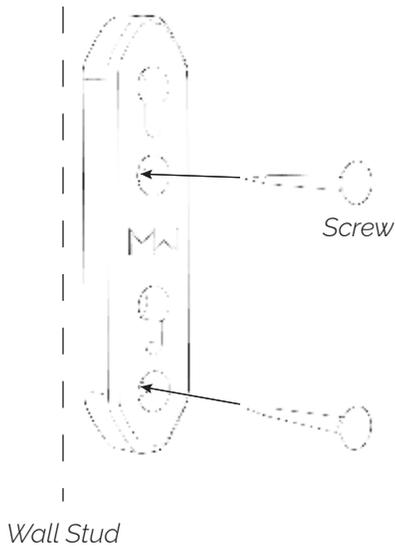

Use level for select accessories. Measure and mark Nano locations before fastening to wall.

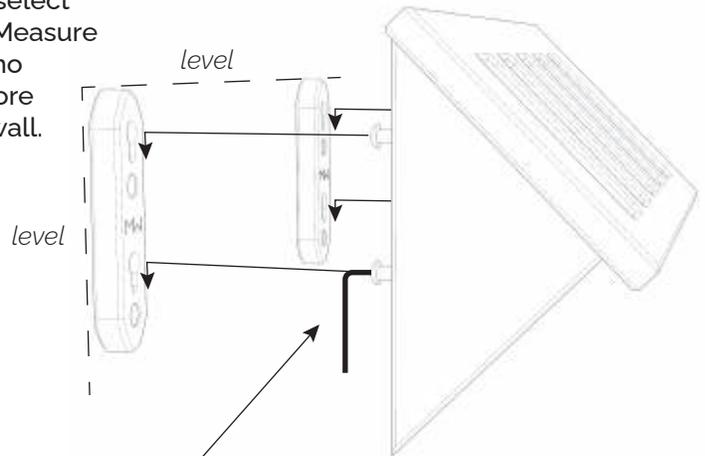

For horizontal applications, fasten one side on wall stud and use provided screw anchor to attach screws to drywall side.

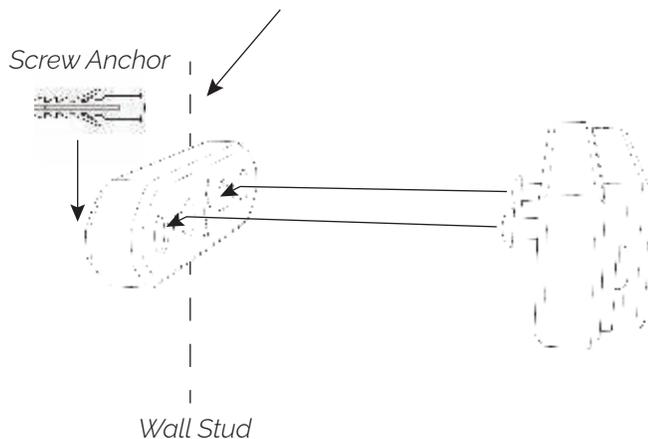

All ModWall accessories are compatible with Nano Mounts. With provided hex key, adjust the screws on back of accessories for a snug and secure fit. Tight fitment recommended!

Share your setup with us and the world!



support@tacticalwalls.com

TACTICALWALLS.COM